

ITALIANO



DESCRIZIONE

L'Expert nano modello 200NANO3CK01 è un regolatore elettronico a microprocessore adatto per la gestione di banchi frigo, vetrine ed unità frigorifere statiche o ventilate, con sbrinamento a sosta o elettrico anche in tempo reale (RTC). Esso è dotato di due ingressi analogici per sonde di temperatura NTC, un ingresso digitale, tre relè per la gestione di compressore, ventole e sbrinamento (il relè di sbrinamento può essere configurato come comando luce) e buzzer. Il regolatore può essere configurato anche per applicazioni di chiamata caldo.

CARATTERISTICHE PRINCIPALI

- Configurabile per applicazioni freddo o per applicazioni caldo.
- Relè per la gestione di compressore, ventilatori dell'evaporatore e resistenze di sbrinamento (l'uscita di sbrinamento può essere configurata come uscita luce).
- Attivazione sbrinamenti in tempo reale, fino a 6 partenze in 24h.
- Sbrinamento configurabile a sosta, a resistenze o ad inversione di ciclo ed impostabile per frequenza e durata. Il fine sbrinamento può avvenire a tempo o per temperatura.
- START/STOP sbrinamento manuale da tasto.
- ON/OFF impianto da tasto.
- ON/OFF luce cella con tasto o tramite micro-porta (se si configura l'uscita sbrinamento come luce cella).
- Visualizzazione/regolazione della temperatura con punto decimale
- Superficie frontale piana per una facile pulizia e tasti di ampie dimensioni personalizzabili in vari colori (su richiesta).
- Display LED a 3 cifre con segno, punto decimale, icone di stato impianto. Buzzer interno per segnalazioni sonore.
- Filosofia di programmazione PEGO che garantisce uno start-up immediato.
- Connessione seriale RS485 con protocollo Modbus-RTU o Telenet.
- Protezione frontale IP65. Duplice possibilità di fissaggio: clips / viti.
- Tensione di alimentazione e tipo di morsetti in base al modello.
- Funzione HACCP per la memorizzazione e la visualizzazione dell'ultimo allarme di temperatura

MODELLI SERIE NANO3CK

CODICE PEGO	DESCRIZIONE EXPERT NANO
200NANO3CK01	Alim.230Vac, 3 relè (8A+8A+16A), ingresso digitale, funz. caldo/freddo, RTC, RS485, Buzzer, morsetti fissi.

FUNZIONE DEI TASTI

TASTO	FUNZIONE
	TASTO UP Incrementa i valori / Scorre verso l'alto i parametri. Taccia l'allarme sonoro se presente / Acquisisce un allarme. Con variabile dO2=1 se premuto per più di 3 sec. attiva / disattiva la luce cella (uscita DO2). All'avvenuto inserimento/disinserimento manuale della luce viene generato un BIP di conferma.
	TASTO DOWN Decrementa i valori / Scorre verso il basso i parametri Premuto per più di 3 sec. attiva lo sbrinamento manuale (se sussistono le condizioni di attivazione). Premuto per più di 3 secondi durante uno sbrinamento termina lo sbrinamento stesso. All'avvenuto inserimento/disinserimento manuale di uno sbrinamento viene generato un BIP di conferma.
Stand by	TASTO STAND-BY Premuto per più di 1 sec. alterna lo stato di Stand-by allo stato normale di funzionamento e viceversa. All'avvenuta commutazione viene generato un BIP di conferma. In stato di stand-by si ferma l'impianto e il display alterna la scritta OFF con la temperatura.
Set	TASTO SET Visualizza il set point Permette di impostare il set point se premuto in combinazione con il tasto DOWN o il tasto UP Ripristina l'allarme sonoro se presente.

ICONE DI STATO

ICONA	SIGNIFICATO
	ICONA CHIAMATA FREDDO (icona attiva con mOd=0) Led OFF = Chiamata freddo OFF Led ON = Chiamata freddo ON Led Lampeggiante = Chiamata freddo ON in attesa del tempo di ritardo C1
	ICONA CHIAMATA CALDO (icona attiva con mOd=1) Led OFF = Chiamata caldo OFF Led ON = Chiamata caldo ON
	ICONA VENTILATORI Led OFF = Ventilatori OFF Led ON = Ventilatori ON Led Lampeggiante = Ventilatori in pausa dopo lo sbrinamento (vedi parametro F5)
	ICONA SBRINAMENTO (icona attiva con mOd=0) Led OFF = Sbrinamento OFF Led ON = Sbrinamento ON Led Lampeggiante = Sgocciamento in corso dopo lo sbrinamento (vedi parametro d7)
	ICONA MICRO PORTA / LUCE CELLA Led OFF = Micro porta non Attivo o non utilizzato e luce cella spenta Led ON = Luce cella ON (funzione attiva solo se la variabile dO2=1) Led Lampeggiante = Micro porta Attivo o luce cella ON con allarme E8.
	ICONA PRESENZA ALLARME Led OFF = Nessun allarme presente Led ON = Indica un avvenuto intervento dell'allarme di temperatura poi rientrato (allarme HACCP). Led Lampeggiante = Allarme presente


PRESSIONE COMBINATA DI TASTI E LORO FUNZIONI

FUNZIONE / COMBINAZIONE TASTI
PROGRAMMAZIONE DEL SET / (Set + ^ o v) Premere il tasto "Set" per visualizzare il valore di SETPOINT corrente (temperatura). Mantenendo premuto tasto "Set" e premendo uno dei tasti (^) o (v) si modifica il valore di SETPOINT. Rilasciare il tasto "Set" per ritornare alla visualizzazione della temperatura cella, la memorizzazione delle modifiche apportate avverrà automaticamente.
PROGRAMMAZIONE DI 1° LIVELLO / (^ + v) Premere contemporaneamente i tasti "UP" e "DOWN" per più di 3 secondi per accedere al menù programmazione di primo livello. All'ingresso del menù viene generato un BIP di conferma. Dopo 30 secondi si ha l'uscita in automatico dal menù.
PROGRAMMAZIONE DI 2° LIVELLO / (^ + v + Stand-by) Premere contemporaneamente i tasti "UP", "DOWN" e "Stand-by" per più di 3 secondi per accedere al menù programmazione di secondo livello. All'ingresso del menù viene generato un BIP di conferma e lo strumento viene portato in "stand-by".
MENU' HACCP PER LA VISUALIZZAZIONE DELLA REGISTRAZIONE DELL'ULTIMO ALLARME DI TEMPERATURA AVVENUTO / (^ + Stand-by) Premere contemporaneamente per più di 3 secondi per accedere al menù HACCP. All'ingresso del menù viene generato un BIP di conferma.
USCITA DALLA PROGRAMMAZIONE / (^ + v) All'interno di un qualsiasi menù di programmazione la pressione contemporanea dei tasti "UP" e "DOWN" per più di 3 secondi salva le impostazioni effettuate uscendo dal menù stesso. All'uscita del menù viene generato un BIP di conferma.

DATI TECNICI

Tensione di alimentazione	230 V~ +10/-15% 50/60Hz
Modello 200NANO3CK01	230 V~ +10/-15% 50/60Hz
Potenza assorbita	3 VA Max
Condizioni climatiche	
Temperatura di lavoro	-5T55°C - umidità < 90% U.R. non condensante
Temperatura di immagazzinamento	-20T70°C - umidità < 90% U.R. non condensante
Ambienti di lavoro non idonei	Ambienti con forti vibrazioni o urti; atmosfere aggressive, inquinanti o corrosive, esposizione all'irraggiamento solare diretto, con atmosfere esplosive o gas infiammabili.
Caratteristiche generali	
Display	3 Digit con segno, punto decimale e nove led di stato
Risoluzione	0,1 °C
Precisione lettura sonde (elettronica)	± 0,5 °C
Range di lettura	-45T99 °C
Morsetti potenza	fissi a vite per cavi di sezione da 0.2 a 2.5mm ²
Morsetti di segnale	fissi a vite per cavi di sezione da 0.2 a 1.5mm ²
Orologio	Orologio per sbrinamenti programmati (RTC)
Classe software: A /	Mantenimento parametri su memoria non volatile (EEPROM)
Caratteristiche ingressi	
Ingressi analogici	2 ingressi per sonde NTC (10KΩ 1% a 25°C)
Ingressi digitali	1 ingresso (da contatto pulito)
Caratteristiche uscite	
Relè Compressore (DO1)	N.O. 16(6)A / 250V~
Relè Resistenze (DO2)	N.O. 8(3)A N.C. 6(3)A / 250V~
Relè Ventilatori (DO3)	N.O. 8(3)A / 250V~
Buzzer	Presente
Caratteristiche dimensionali, di isolamento e meccaniche	
Dimensioni	93x37x65mm profondità 59mm
Dima di foratura	71x29mm (+0,2/-0,1mm)
Grado di protezione frontale	IP65 con montaggio a fronte quadro
Montaggio	A fronte quadro mediante clip di fissaggio posteriori o mediante due viti sul frontale
Contenitore	Corpo plastico in PC+ABS UL94 V-0, Frontale trasparente in PC. Mostrina tasti in PC o PC+ABS
Tipo di isolamento	Classe II
Conformità alle normative UE sulla direttiva bassa tensione, compatibilità EMC e marcatura CE	
Conforme alle seguenti direttive UE: Direttive 2014/30/UE, 2014/35/UE.	
Conforme alle seguenti norme armonizzate: EN60730-1:2016, EN60730-2-9:2010, EN61000-6-1:2007, EN61000-6-3:2007	


DIMENSIONI (mm)

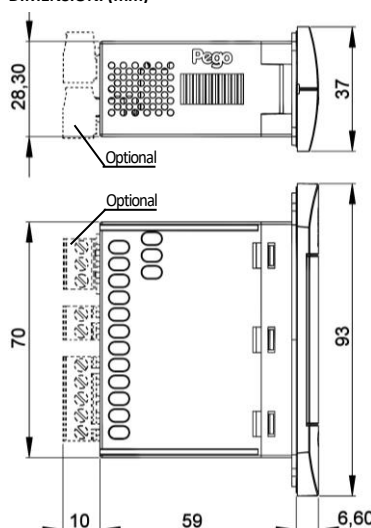


DIMA DI FORATURA (mm)




COLLEGAMENTI ELETTRICI

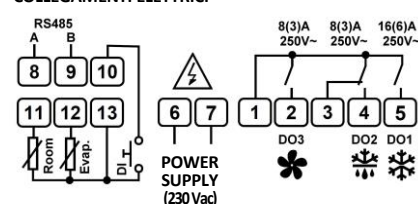

FISSAGGIO A PANNELLO PER MEZZO DI DUE CLIPS POSTERIORI

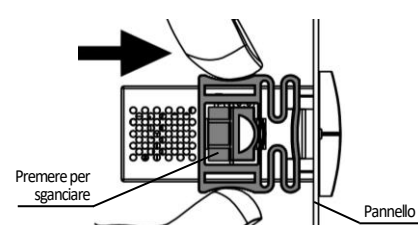

FISSAGGIO A PANNELLO PER MEZZO DI DUE VITI FRONTALI

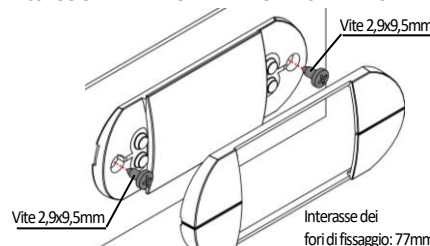

ITALIANO

ELENCO VARIABILI LIVELLO HACCP
(Valori in sola lettura)

GESTIONE ALLARMI HACCP

Con temperatura sonda ambiente $\leq A1$, dopo il tempo Ald, viene attivato l'allarme EL di bassa temperatura

Con temperatura sonda ambiente $\geq A2$, dopo il tempo Ald, viene attivato l'allarme EH di alta temperatura

Durante un allarme di alta o bassa temperatura il display alterna la visualizzazione della temperatura con la scritta EH o EL; viene attivato il relè di allarme (se configurato), il Buzzer (tacitabile) e l'icona della campanella di allarme (lampeggiante).

Al rientro delle condizioni di allarme impostate le segnalazioni di allarme si annullano automaticamente (disattivato il relè di allarme, tacitato il buzzer e riattivata la visualizzazione normale).

L'icona della campanella di allarme rimane invece accesa (fissa) per indicare l'avvenuto allarme EH o EL e la memorizzazione dell'evento (vedi menu HACCP per la visualizzazione dell'ultimo allarme temperatura avvenuto).

Per acquisire l'allarme basta premere il pulsante freccia su quando la campanella è accesa fissa.

Viene inoltre registrata la data di inizio dell'ultimo evento EH o EL, la sua durata e la massima o minima temperatura raggiunta.

E' presente inoltre un contatore del n. di allarmi intervenuti dall'ultimo reset allarmi (max 99 allarmi conteggiati).

Per visualizzare i dati relativi all'ultimo allarme di temperatura entrare nel menù HACCP (pressione tasti freccia su + stand-by per 3 secondi)

All'interno del menu è possibile scorrere le voci con freccia su e freccia giù o azzerare tutti i dati memorizzati tenendo premuti i tasti SET + freccia su per 5 secondi all'interno del menù.

A cancellazione avvenuta viene dato un BIP col buzzer per confermare l'avvenuta cancellazione.

L'uscita dal menu avviene attendendo 10 secondi senza premere nulla o premendo contemporaneamente freccia su + freccia giù.

Le variabili del menu HACCP sono visibili in sola lettura e sono le seguenti:

Var	SIGNIFICATO
E##	Indica l'ultimo allarme di temperatura intervenuto. EH= allarme alta temperatura EL = allarme bassa temperatura -- = nessun allarme intervenuto dall'ultimo reset
###	Valore di picco della temperatura raggiunto durante l'ultimo allarme EH o EL -45...+45°C --- = nessun allarme intervenuto dall'ultimo reset
y##	Anno di inizio dell'ultimo allarme di temperatura y 00 – y99 y -- = nessun allarme intervenuto dall'ultimo reset
M##	Mese di inizio dell'ultimo allarme di temperatura M 01 – M12 M -- = nessun allarme intervenuto dall'ultimo reset
d##	Giorno di inizio dell'ultimo allarme di temperatura d 01 – d31 d -- = nessun allarme intervenuto dall'ultimo reset
h##	Ora di inizio dell'ultimo allarme di temperatura h 00 – h24 h -- = nessun allarme intervenuto dall'ultimo reset
m##	Minuti di inizio dell'ultimo allarme di temperatura m 00 – m59 m -- = nessun allarme intervenuto dall'ultimo reset
t##	Durata (ore) dell'ultimo allarme di temperatura t 00 – t99 t -- = nessun allarme intervenuto dall'ultimo reset
C##	Contatore del n. di eventi di allarme temperatura avvenuti (essendo memorizzati i dati dell'ultimo evento di allarme temperatura questo contatore viene incrementato per sapere se precedentemente se ne fossero presentati altri. Questo contatore si resetta con il reset dell'allarme memorizzato (tasto tacito + SET x 5sec.) Esso viene incrementato ad ogni nuovo allarme di temperatura.) C 00 – C99 C -- = nessun allarme intervenuto dall'ultimo reset

DIAGNOSTICA

Il controllore "Expert nano" in caso di eventuali anomalie avvisa l'operatore attraverso dei codici di allarme visualizzati dal display ed un segnale acustico emesso da un buzzer (se presente). L'allarme sonoro è tacitabile per mezzo della pressione del tasto UP (il codice di errore rimane) e viene riattivato con la pressione del tasto SET. Nel caso in cui si verificasse una condizione d'allarme, sul display sarà visualizzato uno dei seguenti messaggi:

TABELLA CODICI DI ALLARME

Var	SIGNIFICATO
E0	Anomalia funzionale della sonda ambiente.
E1	Anomalia funzionale della sonda di sbrinamento (In questo caso eventuali sbrinamenti avranno durata pari al tempo d3).
E2	Errore della memoria EEPROM. Le uscite sono tutte disattivate tranne quelle di allarme se presente.
E8	Allarme uomo in cella.
Ec	Allarme protezione compressore (es. Protezione termica o pressostato di max.) Le uscite sono tutte disattivate tranne quella di allarme, se presente.
Ed	Allarme porta aperta. All'apertura del micro-porta e passato il tempo tdo viene ripristinato il funzionamento normale del controllo dando la segnalazione di allarme di porta aperta (Ed).
EL	Allarme di temperatura minima. Lampeggio della scritta EL alternato alla temperatura (Vedi parametro A1).
EH	Allarme di temperatura massima. Lampeggio della scritta EH alternato alla temperatura. (Vedi parametro A2).
E9	Allarme luce cella. Lampeggio della scritta E9 alternato alla temperatura. (Vedi parametri dO2 e Tdo).

AVVERTENZE GENERALI

In nessun caso PEGO S.r.l. sarà responsabile di eventuali perdite di dati e di informazioni, costi di merci o servizi sostitutivi, danni a cose, persone o animali, mancate vendite o guadagni, interruzioni di attività, eventuali danni diretti, indiretti, incidentali, patrimoniali, di copertura, punitivi, speciali o consequenziali in qualunque modo causati, siano essi contrattuali, extra contrattuali o dovuti a negligenza o altra responsabilità derivati dall'utilizzo del prodotto o dalla sua installazione. Il cattivo funzionamento causato da manomissioni, urti, inadeguata installazione fa decadere automaticamente la garanzia. E' obbligatorio rispettare tutte le indicazioni del seguente manuale e le condizioni di esercizio dell'apparecchio. PEGO S.r.l. declina ogni responsabilità per le possibili inesattezze contenute nel presente manuale, se dovute ad errori di stampa o di trascrizione e si riserva il diritto di apportare ai propri prodotti quelle modifiche che riterrà necessarie o utili, senza pregiudicarne le caratteristiche essenziali.

PRESCRIZIONI ELETTRICHE

Evitare di utilizzare cavi multipolari nei quali siano presenti conduttori collegati a carichi induttivi e di potenza e conduttori di segnale quali sonde ed ingressi digitali. Evitare di alloggiare nella stesse canaline, cavi di alimentazione con cavi di segnale (sonde, ingressi digitali o collegamenti RS485). Ridurre il più possibile le lunghezze dei cavi di collegamento, evitando che il cablaggio assuma la forma a spirale dannosa per possibili effetti induttivi sull'elettronica. Tutti i conduttori impiegati nel cablaggio devono essere opportunamente proporzionati per supportare il carico che devono alimentare. Qualora si renda necessario prolungare le sonde è necessario l'impiego di conduttori di sezione opportuna e comunque non inferiore a 1mm². Il prolungamento o accorciamento delle sonde potrebbe alterare la calibrazione di fabbrica; procedere quindi alla verifica e calibrazione per mezzo di un termometro esterno.

ENGLISH



DESCRIPTION

The Expert nano model 200NANO3CK01 is an electronic regulator operating with microprocessor designed to control refrigerated counters, display windows and static or ventilated refrigeration units with off-cycle or electrical defrosting also in real time clock (RTC). It is fitted with two analogue inputs for NTC temperature probes, one digital input, three relays for the control of the compressor, fans and defrosting function (the defrosting relay can be configured as the light command) and buzzer. The regulator can be also configured for heat applications.

PRINCIPAL CHARACTERISTICS

- Can be configured for hot or cold applications.
- Relay for controlling the compressor, evaporator fans and defrosting elements (defrost output can be configured like light output).
- Clock for programmed defrosts (RTC)
- Defrosting can be configured for off-cycle, heating element or cycle inversion and frequency and duration can be set. End-of-defrosting can be based on time or temperature.
- Key operated manual START/STOP defrosting.
- Key operated ON/OFF.
- Cold room light ON/OFF switch with key or by means of door switch (if defrost output is configured like cold room light).
- Display/adjustment of temperature with decimal point.
- Flat front surface for easy cleaning and keys of ample dimensions which can be customised with various colours (on request).
- 3-Digit LED display with sign, decimal point and system status icon. Internal buzzer for acoustic signals.
- PEGO programming philosophy guaranteeing immediate start-up.
- RS485 serial connection with Modbus-RTU or Telnet protocol.
- IP65 front protection. Two-fold fastening option: clips / screws.
- Voltage and terminal type depending on model.
- HACCP function for memorization and visualization of the last temperature alarm.

NANO3CK SERIES MODELS

PEGO CODE	EXPERT NANO DESCRIPTION
200NANO3CK01	Power 230Vac, 3 relays (8A+8A+16A), digital input, cold/hot function, RTC, RS485, Buzzer, fixed clamps.

KEY FUNCTIONS

Key	FUNCTION
^	UP KEY Increases values / Scrolls parameters in ascending order / Deactivates acoustic alarm if present / Acknowledges an alarm. With variable dO2=1 if pressed for over 3 seconds, activates/deactivates room light (DO2 output). With manual activation/deactivation of the light a BIP is generated to confirm.
v	DOWN KEY Decreases values / Scrolls parameters in descending order / If pressed for over 3 seconds activates manual defrosting (if suitable conditions are present). Terminates defrosting if pressed for over 3 sec. during the defrosting process. With manual activation/deactivation of defrosting a BIP is generated to confirm.
Stand by	STAND-BY KEY If pressed for over 1 seconds alternates the Stand-By with normal mode and vice versa. When mode is alternated a BIP is generated to confirm. In Stand-By mode the system stops and the display signals OFF and the temperature alternating.
Set	SET KEY Displays the set point. Allows the set point to be entered when pressed in combination with the DOWN or UP keys. Resets the acoustic alarm if present.

STATUS ICON

ICON	MEANING
	COLD FUNCTION ICON (icon activated with mOd=0) Led OFF = Cold function OFF Led ON = Cold function ON Flashing Led = Cold function ON waiting for C1 delay
	HOT FUNCTION ICON (icon activated with mOd=1) Led OFF = Hot function OFF Led ON = Hot function ON
	FAN ICON Led OFF = Fans OFF Led ON = Fans ON Flashing Led = Fans paused after defrosting (see parameter F5)
	DEFROSTING ICON (icon activated with mOd=0) Led OFF = Defrosting OFF Led ON = Defrosting ON Led Flashing = Dripping in progress after defrosting (see parameter d7)
	DOOR SWITCH / ROOM LIGHT ICON Led OFF = Door switch not activated or not used and room light off Led ON = Room light ON (function active only if variable dO2=1) Flashing Led = Door switch activated or room light ON with alarm E8.
	ALARM ICON Led OFF = No alarm present Led ON = Indicates temperature alarm intervention with remedy (HACCP alarm). Flashing Led = Alarm present


COMBINED ACTIVATION OF KEYS AND THEIR FUNCTIONS

FUNCTION / KEY COMBINATION
SETTINGS PROGRAMMING / (Set + ^ o v) Press the "Set" key to display the current SETPOINT value (temperature). By holding down the "Set" key and pressing one of the (^) or (v) keys, the SETPOINT value is changed. Release the "Set" key to return to the display of the cell temperature, the changes made will be saved automatically.
LEVEL 1 PROGRAMMING / (^ + v) Press the "UP" and "DOWN" keys simultaneously for more than 3 seconds to access the first level programming menu. Upon entering the menu, a confirmation beep is generated. After 30 seconds, the menu is automatically exited.
LEVEL 2 PROGRAMMING / (^ + v + Stand-by) Press the "UP", "DOWN" and "Stand-by" buttons simultaneously for more than 3 seconds to access the second level programming menu. Upon entering the menu, a confirmation beep is generated and the instrument is placed in "stand-by" mode.
HACCP MENU FOR VISUALIZATION OF THE LAST TEMPERATURE ALARM RECORDING / (^ + Stand-by) Press simultaneously for more than 3 seconds to access the HACCP menu. Upon entering the menu, a confirmation beep is generated.
EXIT PROGRAMMING MENUS / (^ + v) Within any programming menu, pressing the "UP" and "DOWN" keys simultaneously for more than 3 seconds saves the settings made by exiting the menu itself. Upon exiting the menu, a confirmation beep is generated.

TECHNICAL DATA

Power voltage	Model 200NANO3CK01	230V~ +10/-15% 50/60Hz
Absorbed power		3 VA Max
Environment conditions		
Operating temperature	-5T55°C - humidity < 90% Rel. Hum. Not condensing	
Storage temperature	-20T70°C - humidity < 90% Rel. Hum. Not condensing	
Unsuitable operating environments	Environments with strong vibrations or impacts; aggressive, polluted or corrosive atmospheres, exposure to direct solar radiation, explosive atmospheres or flammable gas.	
General characteristics		
Display	3-Digit with sign, decimal point and 9 LED status indicators	
Resolution	0.1 °C	
Probe precision (electronic)	± 0.5 °C	
Reading range	-45T99 °C	
Power clamps	fixed, screw for cables with c/section 0.2 to 2.5mm ²	
Signal clamps	fixed, screw for cables with c/section 0.2 to 1.5mm ²	
Clock	Clock for programmed defrosts (RTC)	
Software class: A / Parameters saved on non-volatile memory (EEPROM)		
Input characteristics		
Analogue inputs	2 Inputs for NTC probes (10KΩ 1% at 25°C)	
Digital inputs	1 Input (clean contact)	
Output characteristics		
Compressor relay (DO1)	N.O. 16(6A) / 250V~	
Heating elements relay (DO2)	N.O. 8(3A) N.C. 6(3A) / 250V~	
Fan relay (DO3)	N.O. 8(3A) / 250V~	
Buzzer	Present	
Dimensional, insulation and mechanical characteristics		
Dimensions	93x37x65mm Depth 59mm	
Drill hole template	71x29mm (+0.2/-0.1mm)	
Front protection rating	IP65 with front board installation	
Installation	In front of board by means of rear fastening clips or two front screws	
Casing	Plastic PC+ABS UL94 V-0 body, PC transparent front, Key panel PC or PC+ABS	
Insulation type	Class II	
Conformity with EU low voltage directives, electromagnetic compatibility and EC mark		
Conforms to following EU Directives: Directives 2014/30/EU, 2014/35/EU.		
Conforms to following harmonised standards: EN60730-1:2016, EN60730-2-9:2010, EN61000-6-1:2007, EN61000-6-3:2007		


DIMENSIONS (mm)

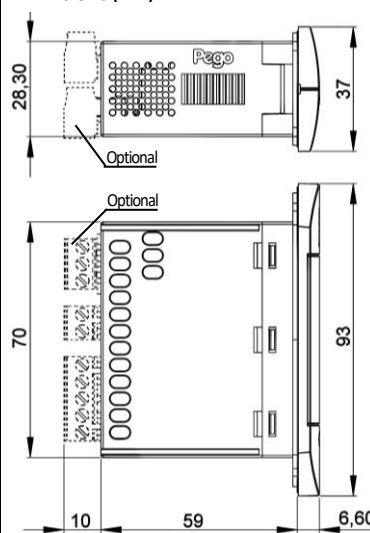


DRILL HOLE TEMPLATE (mm)




ELECTRICAL CONNECTIONS

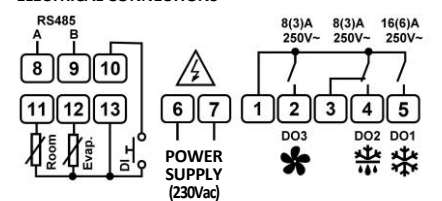

FASTENING TO PANEL BY MEANS OF TWO BACK CLIPS

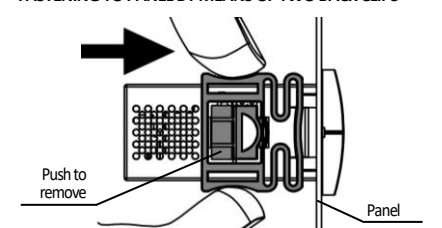

FASTENING TO PANEL BY MEANS OF TWO FRONT SCREW

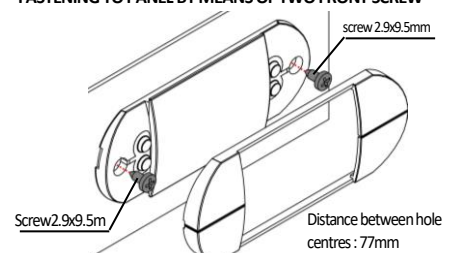

ENGLISH

LIST OF FIRST LEVEL VARIABLES (User level)

Var	MEANING	DEF.
r0	Temperature differential in relation to principal SET-POINT < Range: 0.2 ÷ 10°C > Expressed in absolute values and defines hysteresis (positive if mOd=0 or negative if mOd=1) of temperature in relation to SET POINT.	2
d0	Defrosting interval < Range: 0 ÷ 24 hours > If d0=0 defrosting is excluded.	4
d2	Defrosting end set point < Range: -35 ÷ 45°C > Defrosting is not performed if the temperature read by the defrosting probe is higher than value d2. (In the event of a defective probe, defrosting is performed on a time basis.)	15
d3	Maximum defrosting time < Range: 1 ÷ 240 min >	25
d7	Dripping duration < Range: 0 ÷ 10 min > At completion of defrosting the compressor and fans remain inactive for the set period of time d7 and the defrosting LED on the front of the board flashes.	0
F5	Fan stop after defrosting < Range: 0 ÷ 10 min > Keeps fans inactive for a period of time F5 after dripping. This period is timed from the end of dripping. If dripping is not set, the fans pause directly after defrosting.	0
A1	Minimum temperature alarm < Range: -45 ÷ (A2-1)°C > Absolute temperature referred to by the ambient probe below which, following the ALD delay, the LOW temperature alarm is triggered, activating the buzzer (if present) and showing the letters EL alternating with the temperature on the display, as well as the flashing alarm icon.	-45
A2	Maximum temperature alarm < Range: (A1+1) ÷ 99°C > Absolute temperature referred to by the ambient probe above which, following the ALD delay, the HIGH temperature alarm is triggered, activating the buzzer (if present) and showing the letters EH alternating with the temperature on the display, as well as the flashing alarm icon. When the alarm is reset the alarm icon remains on without flashing to indicate that the event occurred, until the UP key is pressed.	99
tEu	Evaporator probe temperature display < °C > (does not display anything if dE=1)	reading only
dFr	Evaporators defrost enabling in real time With d0=0 and dFr=1 it is possible to set up until 6 defrosts in real time in one day through the parameters d41...d46	0
dF1...6	Evaporators defrosts times programming It is possible to set up to 6 times for defrosts (from 00.0 ÷ 23.5) The time is in the mode HH.M where HH represents the hour and M the ten minutes (i.e. 0=0 min.; 1=10 min. etc.). The winking point (.) shows that it is displayed a time and not a temperature.	0

LIST OF SECOND LEVEL VARIABLES (Installer level)

Var	MEANING	DEF.
F3	Fan status with compressor off < Range: 0 ÷ 1 > 0 = Fans in continuous operation 1 = Fans ON only with compressor ON	1
F4	Fan pause during defrosting < Range: 0 ÷ 1 > 0 = Fans ON during defrosting 1 = Fans OFF during defrosting	1
Fst	FAN disable TEMPERATURE < Range: -45 ÷ 99°C > The fans remain disabled if the temperature value read by the evaporator probe is higher than the value of this parameter. The fans are re-enabled with the evaporator probe deactivated or in error mode.	45
Fd	Fst. differential < Range: 1 ÷ 10°C >	2
dE	Evaporator probe exclusion < Range: 0 ÷ 1 > 0 = Evaporator probe present 1 = Evaporator probe absent By excluding the evaporator probe, defrosting occurs cyclically based on d0 period and terminates upon the elapse of d3 time.	0
d1	Defrosting type < Range: 0 ÷ 1 > 0= Heating element 1= Cycle inversion (hot gas)	0

C1	Minimum time between each turning off and on of the compressor < Range: 0 ÷ 15 min >	0
CE1	Duration of compressor ON time in the case of faulty ambient probe (emergency mode). < Range: 0 ÷ 240 min / 0=Disabled > If CE1=0 the emergency mode in the presence of error EO remains disabled, the compressor remains off and defrosting is prevented in order to conserve the remaining cold.	0
CE2	Duration of compressor OFF time in the case of faulty ambient probe (emergency mode). < Range: 5 ÷ 240 >	5
doC	Compressor timeout due to door switch opened < Range: 0 ÷ 5 min > When the door switch opens, the evaporator fans turn off and the compressor continues to function for a period doC, after which it turns off.	0
Tdo	Compressor re-activation time after door opened (with dO2=0) < Range: 0 ÷ 240 min / 0=Disabled > When the door switch opens and after the time tdo, normal function of the control is restored, generating the door open alarm (Ed). Delay time of cold room light alarm signalling and visualization (with dO2=1) < Range: 0 ÷ 240 min / 0=Disabled > On switching on of the light with UP key and passed the Tdo time, the E9 alarm starts. If it has silenced and the light has not switched off on new Tdo time limit, the alarm starts again.	0
mOd	Thermostat functioning mode < Range: 0 ÷ 1 > 0 = Cold function 1 = Hot function (in this mode defrosting and fan disable Fst are excluded)	0
In1	Digital Input DI and activation mode setting < Range: -6 ÷ 6 > 6= Stop defrosting remotely (DI=1) (reads leading edge of impulse) 5= Start defrosting remotely (DI=1) (reads leading edge of impulse) 4= Stand-by remotely (DI=1) (In order to indicate Stand-By mode, the display shows IN4 alternating with the current view) 3= Man-in-room alarm (DI=1) 2= Door switch (DI=1) 1= Compressor protection (DI=1) 0= Disabled -1= Compressor protection (DI=0) -2= Door switch (DI=0) -3= Man-in-room alarm (DI=0) -4= Stand-by remotely (DI=0) (IN4 alternating with the current view is displayed to indicate stand-by mode) -5= Start defrosting remotely (DI=0) (reads leading edge of impulse) -6= Stop defrosting remotely (DI=0) (reads leading edge of impulse)	1
dO2	Digital Output DO2 setting < Range: 0 ÷ 1 > 0= Defrosting heating elements output 1= Room light output (see parameter Tdo)	0
LSE	Minimum value attributable to set point < Range: -45 ÷ (HSE-1) °C >	-45
HSE	Maximum value attributable to set point < Range: +99 ÷ (LSE+1) °C >	45
CAL	Ambient probe value correction < Range: -10 ÷ 10 °C >	0.0
Ald	Delay time for signalling and display of minimum and maximum temperature alarm < Range: 1 ÷ 240 >	120
Ad	Network address for connection to TeleNET or Modbus supervision system < Range: 0 ÷ 31 (SEr=0) 1 ÷ 247 (SEr=1) >	0
SEr	RS-485 communication protocol < Range: 0 ÷ 1 > 0= TeleNET protocol 1= Modbus-RTU protocol	0
P1	Password: protection type (active when PA is different from 0) < Range: 0 ÷ 3 > 0= Displays only the set point and allows alarm stop 1= Displays the set point, allows alarm stop, + defrost + light 2= Blocks access to levels 1 and 2 during programming (all other functions permitted) 3= Blocks access to level 2 during programming (all other functions permitted)	3
PA	Password (see P1 for protection type) < Range: 0 ÷ 999 / 0=Disabled >	0
Yr	Year set	0.99
Mo	Month set up	1.12
dy	Day set up	1.31

Hr	Time set up	0.23
min	Minutes set up	0.59
reL	Release software	reading only

Thermostat Function Modes (mOd)

The variable mOd allows the selection of function mode of the thermostat, in particular:

COLD MODE (mOd=0)

The DO1 output is activated when the temperature measured by the ambient probe reaches or exceeds the SET POINT+r0 value and remains active until the temperature drops below the SET POINT. In this mode, the DO1 output is linked to the cold function icon.

HOT MODE (mOd=1)

The DO1 output is activated when the temperature measured by the ambient probe reaches or exceeds the SET POINT+r0 value and remains active until the temperature increases and exceeds the SET POINT. In this mode, the DO1 output is linked to the hot function icon; defrosting and fan stop Fst are DISABLED.

DIGITAL OUTPUT FUNCTION SETTINGS (dO2)

The variable dO2 allows the allocation two possible functions to digital output DO2 on the basis of its value: 0=defrosting heating elements output and 1=room light output.

In systems with off-cycle or fan defrosting, therefore, dO2=1 can be set to enable the UP key function for the room light. If this key is pressed for longer than 3 sec, it activates/deactivates the room light (output DO2) and controls the relative ROOM LIGHT icon. If the light is manually turned on/off, a BIP is generated as confirmation. When configured for the room light, the dO2 output is automatically activated when the door switch input is active or the man-in-cell alarm is triggered (E8).

PASSWORD FUNCTION

The password function is activated by entering a value other than 0 for the PA parameter. See parameter P1 for various protection levels. The protection is activated automatically if the keyboard remains inactive for about 30 seconds. The figure 000 appears on the display. Use the up/down keys to change the number and the SET key to confirm. The password entry template 000 disappears if the keyboard is not activated within 30 seconds.

If you forget the password, use the universal number 100.

EMERGENCY MODE IN THE CASE OF ERROR EO

This safety mode guarantees the functioning of the compressor even in the case of a faulty ambient probe (error EO). If probe errors EO and CE1 are different to 0, the compressor functions in operation pause mode, with compressor ON for the time CE1 and OFF for the time CE2. If CE1>0 in the case of error EO, defrosting is performed in normal functioning mode. If CE1=0 the emergency mode in the presence of error EO remains disabled. The compressor remains off and defrosting is prevented to conserve the remaining cold. Eliminate as soon as possible the cause of error EO and reactivate the control's normal function for a correct temperature adjustment.

MANUAL DEFROSTING ACTIVATION

To activate defrosting simply press the DOWN key for more than 30 seconds; this activates the heating elements relay. Defrosting is not activated if the appropriate conditions are not present (end-of-defrosting temperature (d2) set lower than the temperature read by the evaporator probe). Defrosting terminates when the end-of-defrosting temperature (d2) is reached or for a maximum defrosting time (d3) or by manually forced end-of-defrosting (end-of-defrosting key or digital input).

MANUALLY FORCED END OF CURRENT DEFROSTING

Pressing the DOWN key for 3 seconds during defrosting forces the end of the current defrosting. In the case of manual end-of-defrosting, dripping is also excluded.

HOT GAS DEFROSTING

Set the parameter d1 =1 to control inversion cycle defrosting. During the entire defrosting process the compressor and defrost relays are activated. For a correct control of the system, the installer must use the defrost output which must allow the opening of the inversion cycle electrovalve and closing of the liquid electrovalve. For capillary systems (without thermostatic valve) it is sufficient to control the inversion cycle electrovalve using the defrost relay command.

AMBIENT TEMPERATURE DISPLAY DURING AND AFTER DEFROSTING

During defrosting and for a minute following the end of defrosting, the display continues to display the last ambient temperature value read before start of defrosting.

RS-485 CONNECTION

Connection to a RS485 network must be chain type, avoiding star connections and observing A and B polarity. It is advisable to use BELDEN 8762 cables. The configuration of the device in the TeleNET program is performed by entering the module name such as "Expert Nano 3 CF device" and assigning to it the same network address entered in the variable Ad. For a Modbus-RTU network connection and for details on the protocols of these devices, refer to the manual "MODBUS-RTU_NANO1RTC" which can be downloaded from our internet site at www.pegio.it.

ENGLISH

VARIABLE LIST HACCP LEVEL
(Values in read-only)

E##	Indicates the latest activated temperature alarm.	EH = high temperature alarm EL = low temperature alarm -- = no alarms have been activated from the latest reset
###	Temperature peak value reached during the latest EH or EL alarm	-45...+45°C --- = no alarms have been activated from the latest reset
y##	Year of the start of the latest temperature alarm	y 00 – y99 y -- = no alarms have been activated from the latest reset
M##	Month of the start of the latest temperature alarm	M 01 – M12 M -- = no alarms have been activated from the latest reset
d##	Day of the start of the latest temperature alarm	d 01 – d31 d -- = nessun allarme intervenuto dall'ultimo reset
h##	Hour of the start of the latest temperature alarm	h 00 – h24 h -- = no alarms have been activated from the latest reset
m##	Minutes of the start of the latest temperature alarm	m 00 – m59 m -- = no alarms have been activated from the latest reset
t##	Duration (hours) of the latest temperature alarm	t 00 – t99 t -- = no alarms have been activated from the latest reset
C##	Contactor of the nr of temperature alarm events occurred (being memorised data of the latest temperature alarm event, the contactor is boosted to know if previously other alarms occurred) . This contactor resets with the memorised alarm reset (silenced button + SET for 5 sec.) It is implemented at every new temperature alarm.)	C 00 – C99 C -- = no alarms have been activated from the latest reset

HACCP ALARM MANAGEMENT

With ambient probe temperature $\leq A1$, after the Ald time, the EL low temperature alarm is activated.

With ambient probe temperature $\geq A2$, after the Ald time, the EH high temperature alarm is activated.

During a high or low temperature alarm, the display alternates the visualisation of the temperature with the EH or EL headings; the alarm relay is activated (if set), the Buzzer (silenceable) and the alarm bell icon (flashing).

When the set alarm conditions are turned off, alarm signals automatically undo (the alarm relay is deactivated, the buzzer is silenced and the normal visualisation is reactivated).

The alarm bell icon remains on (fix) to indicate that EH or EL alarm was triggered and the memorisation of the event (see HACCP menu for displaying the latest temperature alarm activated).

To get the alarm, push the arrow button up when the fix bell light is on.

Besides, the starting date of the latest EH or EL event is registred, together with its duration and its maximum or minimum reached temperature.

A counter of the nr of occurred alarms from the latest alarm reset (max 99 alarms can be counted) is also present.

To display data related to the latest temperature alarm, enter in the HACCP menu (push the arrow button up + stand-by for 3 seconds).

Inside the menu, all the data can be scrolled with the up and down arrows or they can be reset, by pressing the SET button + arrow up button for 5 seconds.

Once the reset occurred, a BIP with the buzzer is provided to confirm the occurred cancelation.

To exit the menu, wait 10 seconds without pressing anything or press simultaneously the up and down arrows.

HACCP variables are available in read-only mode and are the following:

DIAGNOSTICS

In the case of faults, the "Expert nano" control unit informs the operator by means of alarm codes shown on the display and an acoustic signal emitted by the buzzer (if present). The acoustic alarm can be stopped by pressing the UP key (the error code remains) and can be reactivated by pressing the SET key. In the event of an alarm, one of the following messages is displayed:

ALARM CODE TABLE

Var	MEANING
E0	Functional fault of ambient probe.
E1	Functional fault of defrosting probe (in this case, any defrosting processes will have a duration equal to time d3).
E2	EEPROM memory error. All outputs are deactivated except for alarm outputs if present.
E8	Man-in-room alarm.
Ec	Compressor protection alarm (e.g. thermal protection or max. pressure switch). All outputs are deactivated except for the alarm output if present.
Ed	Door open alarm. When the door switch opens and the tdo time has elapsed, normal function of the control is reset, triggering the door open alarm (Ed).
EL	Minimum temperature alarm. The letters EL flash alternating with the temperature (see parameter A1).
EH	Maximum temperature alarm. The letters EH flash alternating with the temperature (see parameter A2).
E9	Room light alarm. The letters E9 flash alternating with the temperature (see parameter dO2 and Tdo).

GENERAL INFORMATION

PEGO S.r.l. does not accept responsibility for any loss of data or information, costs of goods or substitute services, damages to objects, persons or animals, lost sales or profits, interruption of activities, any direct, indirect, accidental, property, insured, punitive, special or consequential damage caused in any way, be it contractual, extra-contractual or due to negligence or other responsibility resulting from the use of the product or its installation. The guarantee automatically becomes invalid in the case of poor functioning due to tampering, impact or inadequate installation. It is mandatory to observe all instructions in this manual and the operating conditions of the device. PEGO S.r.l. does not accept responsibility for any inaccuracies which may be present in this manual in the case that these are due to printing or transcription errors and reserves the right to make modifications to its products which it deems necessary or appropriate, without prejudicing the products essential characteristics.

ELECTRICAL PRESCRIPTIONS

Avoid using multipolar cables with conductors connected to inductive and power loads and signal conductors such as probes and digital inputs. Avoid installing in the same channels power cables and signal cables (probes, digital inputs or RS485 connections). Reduce to a minimum the length of the connecting cables, avoiding that the cabling takes on a spiral form which may have inductive effects on the electronic system. All conductors used in the cabling must be appropriately sized in order to support the load which they must provide. If it is necessary to extend the probes, use conductors with appropriate cross-sections and not less than 1mm². The extension or reduction of the probes may alter the calibration which was performed in the factory. Therefore, verify and calibrate by means of an external thermometer.